

IRC Components quickshifter uses a "Strain Gauge" style sensor that is IP65 rated with quick-disconnect plug. We have put an enormous amount of energy in the form of time, technology and knowledge to create a reliable performance-oriented product. This product is encouraged for use on a closed circuit only, is not homologated for road use. IRC is not liable for any injury or damage to the operator, vehicle, or third parties from the use of this product.

DISCLAIMERS

- System setup must always be done when bike is at complete halt and is parked on stands. A wrong setting could affect, partially or fully, the system's effectiveness, ultimately damaging the gearbox.

- System setting is the responsibility of the user and not of the manufacturer. While fixing sensors, take extra caution to not damage while screwing and unscrewing the bike. It is a delicate product.

- The use of this product is at the total discretion of the private parties.

Each system modification, both of hardware and software, as well as harness or single components, could affect the system functionality. It can do potential damage or cause injury to the user, vehicle, or to third parts and this will negate the product warranty.

- Installation must be done carefully. It is mandatory that you follow instructions provided in the manual book. After installation it is highly recommended that you do proper test of the product before riding on.

- Installation is an extremely crucial setup for system efficiency. Be sure it is done by competent and specialized mechanic.



WARNING

- Our blipper provides an additional throttle % when you need to downshifting. If the engine revs are high, near the red line, the system will provide this acceleration but the bike ECU will cut it to avoid the over revving with engine damage. Result is that the gear could be not engaged or not properly engaged. We suggest don't pass the 80% of max engine revs when you start the downshifting.


- **Blipper works only at 0% throttle. Any other opening % could cause bike limp mode.**
- **Upshift works only in acceleration or constant speed and throttle.**

1. CONNECTIONS

Please follow the following steps to install Blipper in your LEGEND CAR:

1.1 Fix the Main Board

Better if protected by hot and by rain, otherwise fix it into the engine/cockpit bulkhead

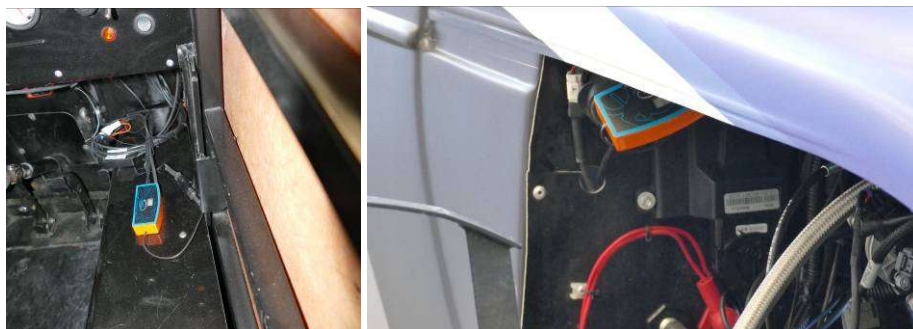

1.2 Connect the Ground Wire

Connect the black eyed wire directly to the battery ground, not to the frame or to the engine.



1.3 Load Cell installation

Remove OEM shiftrod sensor and place the IRC Switch using the uniballs provided in the kit.

Sensor has "magic threads" i.e. both right and left. Connect the sensor to the uniballs. After connecting, tighten the nuts and ensure the grub screws to avoid disconnections due to vibrations (red arrows).

Check that the shiftrod does not rub or touch anything, as this could impair sensing. Try to fix sensors that does not get

in connection with heated parts while riding. Make sure wire has a slight bend/loop so that it does not tighten up and pull the sensors up or down while shifting. Warranty does not cover ripped out wires



WARNING


To adjust sensor positioning, act on the proper planes on it.
Sensor failure could occur if acting on the cover

1.4 Coils connections

Take the coil harness.



Locate coils above cylinder heads

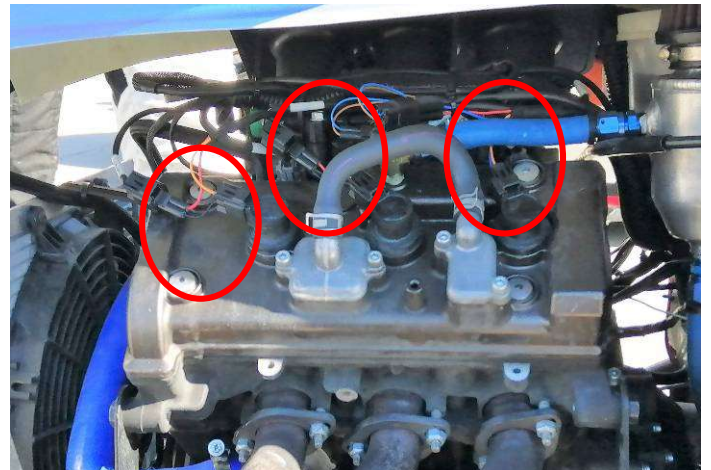

Unplug the connectors and put the IRC bypass in the between. No matter the order.

1.1 Gearshift Connector


Connect the **Yellow** wire that comes out alone from the IRC orange box, to the gearshift sensor if you want the gearshift management.

The gearshift sensor connector is under the tank left side. It is a blue or black 3 ways connector. The gearshift signal is the wire in the middle. On the side picture it is the blue wire. Connect the IRC wire to it with the cable clamp (provided in the box) or, better, solder it.



1.5 APS Connector

Locate the APS connector on the front left side of the bike under light cover.

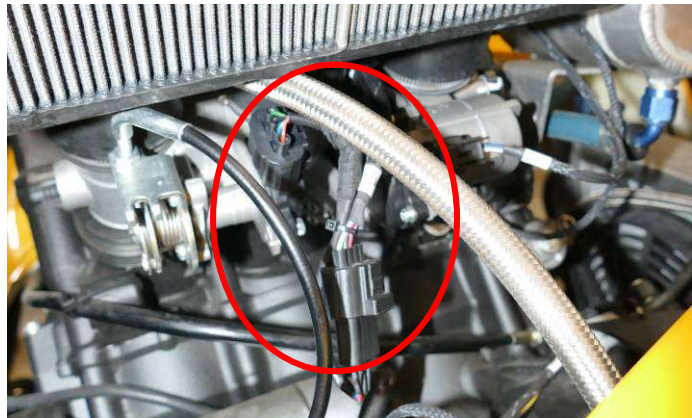

Disconnect it and connect in the between the IRC bypass.

Be careful to connect them to twistgrip wire side, not to the throttle body one.



Properly fix the wires using hose clamps avoiding contacts with the forks and hot engine.
Wires must be maintained closed to the frame. Use hose clamp to assure this.

1.6 Wires Fixing



Fix all wires with zip ties WITHOUT LOCKING. Don't press or deform the wires. Simply fix them allowing a certain movement.

2. DISPLAY

At key on, the system will be powered and the ECU makes a general check. I passed, the display will show the firmware Version. Do not start any process, setting or action on sensor until the above routine is completed.
In some Ducati the "key on" is not sufficient to maintain the unit powered but the engine must run.
When the pre load threshold has passed (par. 3.4 and 3.7), the display will show "--". In case of failure, the display will show an "E" followed by a number. Give this code to the assistant.

3. SETTINGS

To set up initial program press both the buttons to enter into the system. Push lower button to scroll the menus forward. Push the upper one to scroll the menus backwards. Press and maintain the lower button to enter into the various menus. However, to exit from the menu and undermenus press upper or both buttons. System will go out of programming session if no button is pushed except the "r" menu. Also during programming, the quickshifter is disabled.



Act only on the following setup. If a menue doesn't appear into the following list, don't modify it.

3.1 Upshift kill time programming "t".

It is the duration of the power cut. It can be adjusted within 20÷99ms. Default is "60"ms.

3.2 Mimimum rpm "rL".

The "Blip" and "Upshift" will not work below 3,000rpm. Above this limit the timing of the blipper is automatically set in function of customer's choice. "rL" are the lower rpm limit level. Default is "03".

3.3 Downshift timing "SL".

Set the desired timing of the "blip" at "rL" rpm (see par. 3.2).
Default is "60".

3.5 Actual Load displaying "S".

To read the value of actual applied load select this menu. This feature is also useful for preload adjustments and to check gearbox wear. A too high preload could affect the gearbox reliability.

- Max Load displaying "--".

At this point, pressing and holding the lower button, the display will show blinking "--" for about 10s. Afterwards it will show the max load value registered in this period. This feature is useful for preload adjustment and for gearbox reliability and maintenance.

3.6 Downshift Timing "tS".

Set the "Blip" timing within 20÷98ms at 8,000 rpm. Default 98ms. The blip timing at 12,500rpm will be 70ms more than this value. In the between the CPU will interpolate the value. We suggest timings between 98 and 80ms. A too long timing allows gear in but then you'll feel the bike pushing a while. A too short timing doesn't allow a proper downshift. We suggest to start with high value and reduce it during the tests on road.

Default is "70".

3.8 Pushing/Pulling"CE".

Referring to the upshifting, "C" Pushing, "E" Pulling. To properly set this parameter, engage the 2nd gear and try to put the 3rd. Look at the shiftrod: Is it compressing (C: Push) or extending (E: Pull)?

OEM rearsets require "E".

3.9 Normally Open/Closed circuit "OC".

"C": commonly open circuit, default value for OEM quickshifter and for most all additional quickshifter module,

"O": commonly closed circuit, for direct cut of coils (UPKIT) or for Power Commander V and some others.

Default is "O"

3.10 Increase of blipping timing in 3rd-2nd and 2nd-1st gears downshifting "1A".

Sometimes the lower gears need a higher blipping timing to be properly engaged. 1A is the Increasing timing in 10 milliseconds. 01 means 10milliseconds. Default is "02".

3.11 Smoothness "rr"

If OEM bike has the upshifter, or if another additional upshift module is used, set it to "00", otherwise, higher values mean increase in smoothness. Initially set the ideal upshift rpm. Visualization: /1000.

Default is "08".

3.12 Set value of 1st Gear "1C"

Use this parameter to set 1st gear value;

Enter into this menu, if possible with engine not running, with bike in 3rd gear. Then, put 1st gear, wait 2 seconds, then esc from menu keep pushed the upper button to save the value.

3.13 Set value of 6th Gear "6U"

Use this parameter to set 6th gear value;

Enter into this menu, if possible with engine not running, with bike in 3rd gear. Then, pus 6th gear, wait 2 seconds, then esc from menu keep pushed the upper button to save the value

3.14 Model bike "H"

Type of firmware. Don't change it. If accidentally changed, set: "02"

4. QUICK PRESETTING SUGGESTIONS

The system is provided fully working. Just properly set "CE" (par. 3.8) to immediately enjoy the blipping. However all parameters are set in safety way. Every rider must properly adapt the system to own riding mode.

These are some suggestions:

4.1 Preloads setting: Give power, don't start engine, don't touch the lever, enter in the menu, go to "S" and check that you read "00" or oscillating "01", not more. Then put 3rd gear and try to push the pedal in the upshifting way till you just "feel" the gears load, not till the upper gear enter. You should read values between "08" and "17". Set this value in "L". Now try to push the pedal in the downshifting way till you just "feel" the gears load, not till the lower gear enter. You should read values between "08" and "17". Set this value in "LS". LS should be around L. Difference mustn't be higher than 2Kgs.

4.2 Blipping timings setting: concentrate on blipping in gears above 3rd and revvs above 10,000rpm. Is the bike "pushing" you after the downshifting? If yes, reduce "tS". Is the downshifting "harsh"? Increase "tS".

After setting the above, now concentrate on blipping in gears above 3rd and revvs around 5,000rpm. Is the bike "pushing" you after the downshifting? If yes, reduce "SL". Is the downshifting "harsh"? Increase "SL".

Now check the downshifting in 3-2 and 2-1 gears. Is the downshifting "harsh"? Increase "1A".

5. TROUBLESHOOTING

5.1 Bike doesn't start

Check upkit harness to the coil is well installed as per 4.2.

Check "OC" set in C.

Check ground wire on battery ground, not to the frame.

Check you don't have "E1" on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1

If a LIPO or any other lightweight battery is used, check it eventually replace it.

5.2 System continuously cut or blipping even if the foot isn't acting on the pedal:

Check ground wire on battery ground, not to the frame.

Check you don't have "E1" on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1

If a LIPO or any other lightweight battery is used, check it eventually replace it.

5.3 Blipper works, upshifting no:

Check "CE according to above par. 3.8.

Check ground wire on battery ground, not to the frame.

Check that when upshifting the display will show "- -" for a while and that you can hear a "click". If no, properly set "L" according to the above 5.1.

Check you don't have "E1" on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1

If a LIPO or any other lightweight battery is used, check it eventually replace it.

Check the "upkit" harness is well installed according to par. 4.3.

5.4 Upshift works, blipper no:

Check "CE according to above par. 3.8.

Check ground wire on battery ground, not to the frame.

Check that when downshifting the display will show "- -" for a while and that you can hear a "click". If no, properly set "LS" according to the above 5.1.

Check you don't have "E1" on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1

If a LIPO or any other lightweight battery is used, check it eventually replace it.

5.5 System works in reverse manner:

Check "CE according to above par. 3.8.

5.6 After blipping, especially at higher rpm, bike goes to limp mode

Check you are connected to APS not to TPS i.e. connect to the first connector you can, following the wires from the throttlegrip. Par 1.5

Reduce "SL" and "tS".

5.7 Gears aren't fully engaged during Upshifting or go out after a while:

Increase "t".

Check "L", according to above 5.1. Eventually increase/reduce it a couple of points and test.

5.8 Gears aren't fully engaged during Blipping or go out after a while:

Increase "SL" and "tS".

Check "LS" according to above 5.1. Eventually increase/reduce it a couple of points and test.

5.9 During blipping bike push ahead.

If at higher rpm (above 8,000rpm) Reduce "tS".

If at lower rpm, reduce "SL".

6. WORKING CONDITIONS

11÷17.5V; -20°C÷ +60°C

Enjoy your choice.

For any questions or troubleshooting queries, please contact us at:
legend-support@irccomponents.it • Ph. (+39) 010 8938654