

# SGRACE\_RSV4\_B by

The SGRACE\_DO is our latest high performance design. We have put an enormous amount of energy in the form of time, technology and knowledge to create a reliable and innovative product. It is a "Strain Gauge" sensor style that ensures long lasting performance. To bring this product into reality we have used all the manufacturing tricks, electronic formulae and rendered a keen eye on software support to make this happen. This product is encouraged to use in a on a closed circuit only. It is not homologated for road use. The manufacturer of this product is not liable for any injury or damage to the operator, vehicle, or third parties from the use of this product.

**MADE IN ITALY**



## DISCLAIMERS




- System setup must always be done when bike is at complete halt and is parked on stands.
- A wrong setting could affect, partially or fully, the system's effectiveness, ultimately damaging the gearbox.
- System setting is the responsibility of the user and not of the manufacturer. While fixing sensors, take extra caution to not damage while screwing and unscrewing the bike. It is a delicate product.
- The use of this product is at the total discretion of the private parties.
- Each system modification, both of hardware and software, as well as harness or single components, could affect the system functionality. It can do potential damage or cause injury to the user, vehicle, or to third parts and this will negate the product warranty.
- Installation must be done carefully It is mandatory that you follow instructions provided in the manual book. After installation it is highly recommended that you do proper test of the product before riding on.
- Installation is an extremely crucial setup for system efficiency. Be sure it is done by competent and specialized mechanic.

This manual is issued on Feb 28<sup>th</sup> 2017 in Rev. 4. It is the end user's responsibility to periodically visit the website [www.irccomponents.it](http://www.irccomponents.it) in order to check for revised and updated manual guides.

## 1. CONNECTIONS

Sensor has "magic threads" i.e. both right and left. Connect the sensor (LABELED SENSOR) to the provided shiftrod. Cut it if necessary. Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations.

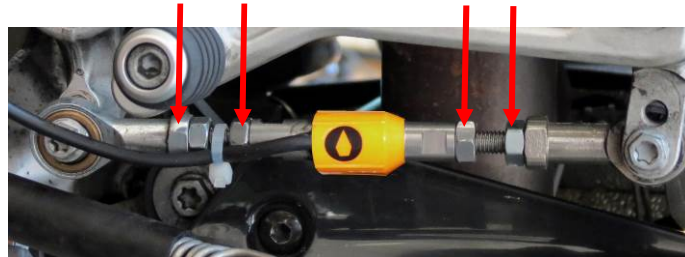

Install sensor and rod with uniball links on both ends, most bikes have uniballs stock, check that the shiftrod does not rub or touch anything. Put sensor far from very hot parts. Make sure wire has a slight bend/loop so it does not tighten up and pull at the sensor during up or down shift. Warranty doesn't cover ripped out wires.



**WARNING:** To adjust sensor positioning, act on the proper planes on it. Sensor failure could occur if acting on the cover.

## 2. DISPLAY

After switching on the system, the ECU makes a general check and, if passed, the display will show the firmware version.



**WARNING:** Do not start any process, setting or action on sensor until the above routine is completed.

When the pre load threshold has passed (par. 3.3), the display will show "--".

In case of failure, the display will show an "E" followed by a number. Give this code to the assistant.

### 3. INITIAL SET UP

To set up initial program press both the buttons to enter into the system.

Push lower button to **scroll the menus forward**.

Push the upper one to **scroll the menus backwards**.

Press and maintain the lower button to enter into the various menus. However, to exit from the menu and undermenus press upper or both buttons. System will go out of programming session if no button is pushed except the "r" menu. Also during programming, the quickshifter is disabled.



**WARNING:** Act only on the following setup options.

#### 3.1 Upshift Signal time programming "t"

Signal time programming for upshift.

#### 3.4 Upshift Pre Load adjustment "L"

The default setting is set at "17" and it can be customized according to the need. Keep the ignition on and engine off to try to select the upper gear. Shift lever should move through the spring load in gearbox until gear resistance is felt. The panel LED will display "--" for a while. If this happens too early or too late, then consequently change the preload set.

#### 3.5 Actual Load displaying "S"

To read the value of actual applied load select this menu. This feature is also useful for preload adjustments and to check gearbox wear and is convenient to maintain the system.

##### 3.5.1 Max Load displaying "--"

At this point, pressing and holding the lower button, the display will show blinking "--" for about 10s. Afterwards it will show the max load value registered in this period. This feature is useful for preload adjustment and for gearbox reliability and maintenance.

#### 3.6 Downshift Pre Load adjustment "LS"

The default setting is set at "12" and it can be customized according to the need. Shift lever should move through the spring load in gearbox until gear resistance is felt. The panel LED will display "--" for a while. If this happens too early or too late, then consequently change the preload set.

#### 3.9 Type of analog output "dS"

If your system has the analog output, this function allows to set the type of output: "dC": 0÷5V with 0 load at 2.5V. "dU": 0÷5V with 0 load at 5V. "DD": 0÷5V with 0 load con at 0V.

#### 3.10 Bottom/Upper limits "dr"

If your system has the analog output, set "5"=±50Kg, "10"=±100Kg.

#### 3.11 Pushing/Pulling "CE"

"C" Pushing, "E" Pulling. Referred to upshifting.

Verde giallo arancio marrone

### 4. CONNECTIONS

Connect **Red** wire to an ignition switch controlled +12v source and **Black** to ground.

Plug the **White** connector to the bike female quickshifter connector.

### 5. TROUBLESHOOTING

5.1 System continuously cut or blipping even if the foot isn't acting on the pedal: check the sensor. Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1.

5.2 System works in reverse manner: check and properly set "CE".

### 6. WORKING CONDITIONS

8÷17.5V; -20°C÷+95°C.

We value your business with us.

For any questions or troubleshooting queries, please contact us at:

[tech-support@irccomponents.com](mailto:tech-support@irccomponents.com) Ph. (+39)0108938654.

*Enjoy your choice.*