

IRC Components quickshifter uses a "Strain Gauge" style sensor that is IP65 rated with quick-disconnect plug. We have put an enormous amount of energy in the form of time, technology and knowledge to create a reliable performance-oriented product. This product is encouraged for use on a closed circuit only, is not homologated for road use. IRC is not liable for any injury or damage to the operator, vehicle, or third parties from the use of this product.

DISCLAIMERS

- System setup must always be done when bike is at complete halt and is parked on stands. A wrong setting could affect, partially or fully, the system's effectiveness, ultimately damaging the gearbox.

- System setting is the responsibility of the user and not of the manufacturer. While fixing sensors, take extra caution to not damage while screwing and unscrewing the bike. It is a delicate product.

- The use of this product is at the total discretion of the private parties.

Each system modification, both of hardware and software, as well as harness or single components, could affect the system functionality. It can do potential damage or cause injury to the user, vehicle, or to third parts and this will negate the product warranty.

- Installation must be done carefully. It is mandatory that you follow instructions provided in the manual book. After installation it is highly recommended that you do proper test of the product before riding on.

- Installation is an extremely crucial setup for system efficiency. Be sure it is done by competent and specialized mechanic.




WARNING

- Our quickshifter provides an additional throttle % when you need to downshifting. If the engine revs are high, near the red line, the system will provide this acceleration but the bike ECU will cut it to avoid the over revving with engine damage. Result is that the gear could be not engaged or not properly engaged. We suggest don't pass the 80% of max engine revs when you start the downshifting.

1. CONNECTIONS

1.1 Fix the Main Board on underseat


Under rear seat, in an accessible position

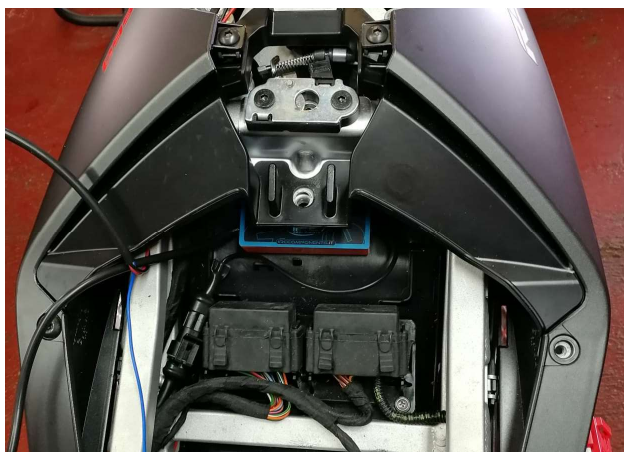

1.2 Load Cell installation

Sensor has "magic threads" i.e. both right and left. Connect the sensor to the shiftrod (This has to be bought separately it is not included in the kit). Once you have connected it, measure the shift-rod and cut it to customize it. After connecting, tighten the nuts and ensure the grub screws to avoid disconnections due to vibrations.

However, Install sensors and rod with uniball links on both the ends. Most bikes have stock uniballs. Check that the shiftrod does not rub or touch anything, as this could impair sensing. Try to fix sensors that does not get in connection with heated parts while riding. Make sure wire has a slight bend/loop so that it does not tighten up and pull the sensors up or down while shifting. Warranty does not cover ripped out wires

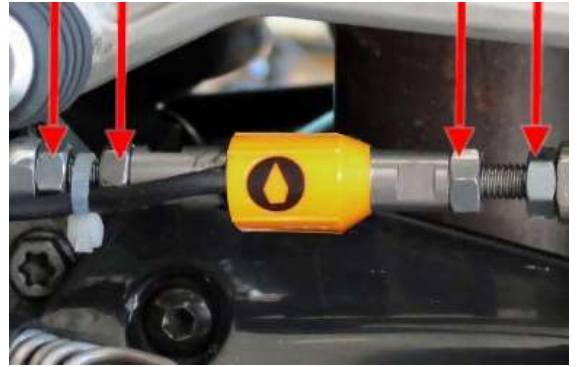

To avoid wire pulled damage, Fix the wire with a zip tie plastic strip.



WARNING

To adjust sensor positioning, act on the proper planes on it.
Sensor failure could occur if acting on the cover

1.3 Quickshifter connector installation

Locate the OEM quickshifter connector on the right side of the frame. Remove it together with the OEM quickshifter sensor and connect the IRC connector.

The IRC connector has only one central wire engaged while the OEM has all 3 wires fitted. This is due to the different powering the IRC unit needs and doesn't affect functioning at all.



1.4 Power connection

Locate the rear plate tail light.

Unplug the connector and connect the IRC bypass in the between.



2. DISPLAY

At key on, the system will be powered and the ECU makes a general check. If not passed, the display will show a blinking dot at the right lower corner.

Wait 5 seconds after the key on before setting or acting on the sensor.

3. SETTINGS

To set up initial program press both the buttons to enter into the system. Push lower button to scroll the menus forward. Push the upper one to scroll the menus backwards. Press and maintain the lower button to enter into the various menus. However, to exit from the menu and undermenus press upper or both buttons. System will go out of programming session if no button is pushed except the "r" menu. Also during programming, the quickshifter is disabled.



WARNING

Act only on the following setup. If a menu doesn't appear into the following list, don't modify it.

3.1 Upshift Pre Load adjustment "L"

Default setting "12" it's possible to change the load necessary to apply on the sensor for having the upshift signal. With ignition on, engine off, try to select the upper gear. Shift lever should move through the spring load in gearbox until gear resistance is felt. If rpm is above the set value at par. 3.8, the panel led should show "--" for a while. If this happen too early or too late consequently change the preload set.



WARNING

A too high preload could affect the gearbox reliability and makes the shifting "harsh". A too low preload could cause unpredicted up/ signal cut of power for a while.

So properly adjust this parameter

3.2 Actual Load displaying "S"

Entering in this menu it's possible to read the actual load value. Useful feature for preload adjustment and for gearbox check and maintenance.

3.2.1 Max Load displaying "--"

At this point, pressing and holding the lower button, the display will show blinking "--" for about 10s. Afterwards it will show the max load value registered in this period Useful feature for preload adjustment and for gearbox reliability and maintenance. During this menu the sensor is enabled.

3.3 Downshift Pre Load adjustment "LS".

The default setting is set at "12" and it can be customized according to the need. Shift lever should move through the spring load in gearbox until gear resistance is felt. The panel LED will display "--" for a while. If this happens too early or too late, then consequently change the preload set.

Default is "16".



WARNING

A too high preload could affect the gearbox reliability and makes the shifting "harsh". A too low preload could cause unpredicted up/ signal cut of power for a while.

So properly adjust this parameter

3.9 Type of analog output in standby "dS"

Can be:

"dC": 2.5v (default)

"dU": 2.4v

3.10 Bottom/Upper limits "dr"

Without moving the lever, you always have volts set on parameter dS;

Then, you can choose to have a value which remain at "dS" value untill preloads are reached (usefull to manage preloads directly from our ECU) and can be set in following way:

"05": 1.4÷3.6V (default).

"10": 0.5÷4.3V

Otherwise, you can have a pure analogic signal, which will move following the load cell movement, and can be set put the following values:

"15": threshold can be fixed with parameters L (+) LS (-)

"20": ±50kg

3.11 Pushing/Pulling"CE"

Referring to the upshifting, "C" Pushing, "E" Pulling. To properly set this parameter, engage the 2nd gear and try to put the 3rd. Look at the shiftrd: Is it compressing (C: Push) or extending (E: Pull)?

4. QUICK PRESETTING SUGGESTIONS

The system is provided fully working. Just properly set "CE" (par. 3.11) to immediately enjoy the blipping. However all parameters are set in safety way. Every rider must properly adapt the system to own riding mode.

These are some suggestions:

4.1 Preloads setting: Give power, don't start engine, don't touch the lever, enter in the menu, go to "S" and check that you read "00" or oscillating "01", not more. Then put 3rd gear and try to push the pedal in the upshifting way till you just "feel" the gears load, not till the upper gear enter. You should read values between "08" and "17". Set this value in "L" and 2 points less on "LS".

5. TROUBLESHOOTING

5.1 Bike doesn't start

Check harness to the rear light is well installed as per 1.4.

Check ground wire on battery ground, not to the frame.

Check you don't have "1" blinking on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1.1. If a LIPO or any other lightweight battery is used, check its powering during the engine starting. Eventually replace it.

5.2 System continuously cut even if the foot isn't acting on the pedal:

Check ground wire on battery ground, not to the frame.

Check you don't have "1" blinking on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1.2. If a LIPO or any other lightweight battery is used, check its powering during the engine starting. Eventually replace it.

5.3 Upshifting not working:

Check "CE" according to above par. 3.4.

Check ground wire on battery ground, not to the frame.

Check that when upshifting the display will show "- -" for a while and that you can hear a "click". If no, properly set "L" according to the above 5.1. Check you don't have "1" blinking on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1. If a LIPO or any other lightweight battery is used, check its powering during the engine starting. Eventually replace it.

Check harness to the rear light is well installed as per 1.4.

5.4 Downshifting not working:

Check "CE" according to above par. 3.4.

Check ground wire on battery ground, not to the frame.

Check that when upshifting the display will show "- -" for a while and that you can hear a "click". If no, properly set "L" according to the above 5.1. Check you don't have "1" blinking on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1. If a LIPO or any other lightweight battery is used, check its powering during the engine starting. Eventually replace it.

Check harness to the rear light is well installed as per 1.4.

5.5 System works in reverse manner:

Check "CE" according to above par. 3.10.

5.6 System continuously cut even when the foot isn't acting on the pedal:

Check you don't have "1" blinking on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as per Par.1. If a LIPO or any other lightweight battery is used, check its powering during the engine starting. Eventually replace it.

5.7 Gears aren't fully engaged during Upshifting or go out after a while:

Check "L" and "LS", according to above 3.1 and 3.3. Eventually increase/reduce it a couple of points and test.

6. WORKING CONDITIONS

11÷17.5V; -20°C÷+60°C

Enjoy your choice.

For any questions or troubleshooting queries, please contact us at:
tech-support@irccomponents.it • Ph. (+39) 010 8938654