

IRC Components quickshifter uses a "Strain Gauge" style sensor that is IP65 rated with quick-disconnect plug. We have put an enormous amount of energy in the form of time, technology and knowledge to create a reliable performance-oriented product. This product is encouraged for use on a closed circuit only, is not homologated for road use. IRC is not liable for any injury or damage to the operator, vehicle, or third parties from the use of this product.

DISCLAIMERS

- System setup must always be done when bike is at complete halt and is parked on stands. A wrong setting could affect, partially or fully, the system's effectiveness, ultimately damaging the gearbox.

- System setting is the responsibility of the user and not of the manufacturer. While fixing sensors, take extra caution to not damage while screwing and unscrewing the bike. It is a delicate product.

- The use of this product is at the total discretion of the private parties.

Each system modification, both of hardware and software, as well as harness or single components, could affect the system functionality. It can do potential damage or cause injury to the user, vehicle, or to third parts and this will negate the product warranty.

- Installation must be done carefully. It is mandatory that you follow instructions provided in the manual book. After installation it is highly recommended that you do proper test of the product before riding on.

- Installation is an extremely crucial setup for system efficiency. Be sure it is done by competent and specialized mechanic.

1. INSTALLATION

1.1 Fix the Main Board on underseat

Under rear seat, in an accessible position




1.2 Plugging the unit

Remove the oem quickshifter sensor, unplug it from OEM connector and connect the IRC one.



1.3 Load Cell installation

Sensor has "magic threads" i.e. both right and left. Connect the sensor (LABELED SENSOR) to the provided shiftrod. Cut it if necessary. Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations.

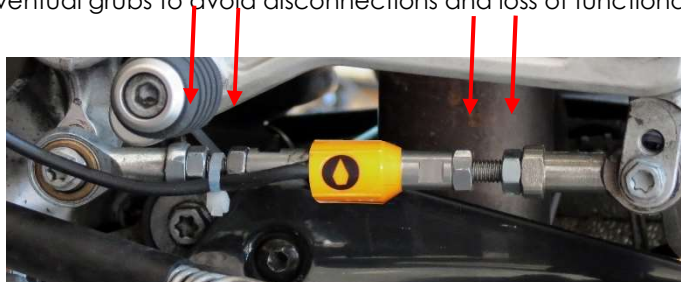

Install sensor and rod with uniball links on both ends, most bikes have uniballs stock, check that the shiftrod does not rub or touch anything. Put sensor far from very hot parts. Make sure wire has a slight bend/loop so it does not tighten up and pull at the sensor during up or down shift. Warranty doesn't cover ripped out wires.



WARNING

To adjust sensor positioning, act on the proper planes on it.
Sensor failure could occur if acting on the cover

2. DISPLAY

At key on, the system will be powered and the ECU makes a general check.

Do not start any process, setting or action on sensor until the above routine is completed, so wait 10 seconds.

In case of failure, the display will show an "E" followed by a number. Give this code to the assistant.

3. SETTINGS

To set up initial program press both the buttons to enter into the system. Push lower button to scroll the menus forward. Push the upper one to scroll the menus backwards. Press and maintain the lower button to enter into the various menus. However, to exit from the menu and undermenus press upper or both buttons. System will go out of programming session if no button is pushed except the "r" menu. Also during programming, the quickshifter is disabled.



WARNING

Act only on the following setup. If a menu doesn't appear into the following list, **don't modify it.**

3.1 Upshift signal timing "I".

It is the duration of the pulse signal. It shouldn't affect the performances. Leave as it is, Eventually set it at the max value

3.2 Upshift Pre Load adjustment "L".

The default setting is set at "14" and it can be customized according to the need. Keep the ignition on and engine off to try to select the upper gear. Shift lever should move through the spring load in gearbox until gear resistance is felt. The panel LED will display "--" for a while. If this happens too early or too late, then consequently change the preload set.

Default is "14".



WARNING

A too high preload could affect the gearbox reliability and makes the shifting "harsh". A too low preload could cause unpredicted up/ signal cut of power for a while.

So properly adjust this parameter

3.3 Actual Load displaying "S".

To read the value of actual applied load select this menu. This feature is also useful for preload adjustments and to check gearbox wear. A too high preload could affect the gearbox reliability.

3.3.1 Max Load displaying "--".

Into menu "s" pressing and holding the lower button for a couple of seconds, the display will show blinking "--" for about 10s. Afterwards it will show the max load value registered in this period. This feature is useful for preload adjustment and for gearbox reliability and maintenance.

3.4 Downshift Timing "ts".

It is the duration of the pulse signal. It shouldn't affect the performances. Leave as it is, Eventually set it at the max value.

3.5 Downshift Pre Load adjustment "LS".

The default setting is set at "14" and it can be customized according to the need. Keep the ignition on and engine off to try to select the lower gear. Shift lever should move through the spring load in gearbox until gear resistance is felt. The panel LED will display "--" for a while. If this happens too early or too late, then consequently change the preload set.

Default is "14".



WARNING

A too high preload could affect the gearbox reliability and makes the shifting "harsh". A too low preload could cause unpredicted up/ signal cut of power for a while.

So properly adjust this parameter

3.6 Analogic signal threshold "dl"

Always 2.5v at rest.

Possible threshold setting:

"05" 0.7÷4.3V at step

"10" 0.75÷4.3V continuous analog.

3.7 Pushing/Pulling"CE".

Referring to the downshift, "C" Pushing, "E" Pulling. To properly set this parameter, engage the 2nd gear and try to put the 1st. Look at the shiftrod: Is it compressing (C: Push) or extending (E: Pull)?

4. QUICK PRESETTING SUGGESTIONS

The system is provided fully working. Just properly set "CE" (par. 3.7) to immediately enjoy the system. However all parameters are set in safety way. Every rider must properly adapt the system to own riding mode.

These are some suggestions:

4.1 Preloads setting: Give power, don't start engine, don't touch the lever, enter in the menu, go to "S" and check that you read "00" or oscillating "01", not more. Then put 3rd gear and try to push the pedal in the upshifting way till you just "feel" the gears load, not till the upper gear enter. You should read values between "08" and "17". Set this value in "L".

5. TROUBLESHOOTING

5.2 Upshifting/Downshifting not working or the system continues to cutblip even if foot isn't acting on the pedal:

Check "CE according to above par. 3.7.

Check ground wire on battery ground, not to the frame.

Check that when upshifting the display will show "- -" for a while. If no, properly set "L" according to the above 5.1.

Check you don't have "E1" on the display. If yes, contact your dealer.

Check the sensor: Tight the nuts and the eventual grubs to avoid disconnections and loss of functionality due to vibrations as Par.1

If a LIPO or any other lightweight battery is used, check its powering during the engine starting. Eventually replace it.

5.3 System works in reverse manner:

Check "CE according to above par. 3.7.

6. WORKING CONDITIONS

5V; -20°C ÷ +60°C

Enjoy your choice.

For any questions or troubleshooting queries, please contact us at: tech-support@irccomponents.it • Ph. (+39) 0108352973